

Chapter 1

Product Summary

1.1 Package Contents

The full AS-B standard / communication type should include the following contents:

- 1) AS-B□□□□-TX transmitter module x1 with 200mm M12 waterproof connector (gray wire)
- 2) Standard : AS-B□□□□-RX receiver module x1 with 200mm M12 waterproof connector (black wire)
Communication : AS-B□□□□-CX receiver module x1 with 200mm M12 waterproof connector (blue wire)
- 3) Product Instruction Sheet
- 4) Mounting frame: Mounting frame quantity depends on protected height
160—320 mm: 2 sets; 400—1680 mm: 4 sets; 1760 mm—1920 mm: 6 sets

Connection wire (optional)

AS-B-WT□□□ gray wire: Connection wire for transmitter


AS-B-WR□□□ black wire: Connection wire for standard type of receiver

AS-B-WC□□□ blue wire: Connection wire for communication type of receiver


1.2 Product Description

◎ Module Description

AS-B Standard Type

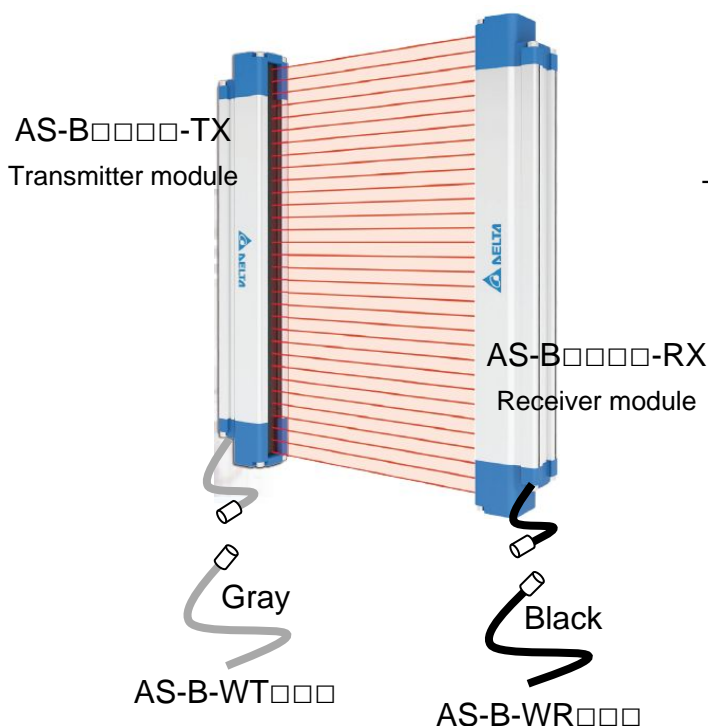


AS-B-C Communication Type

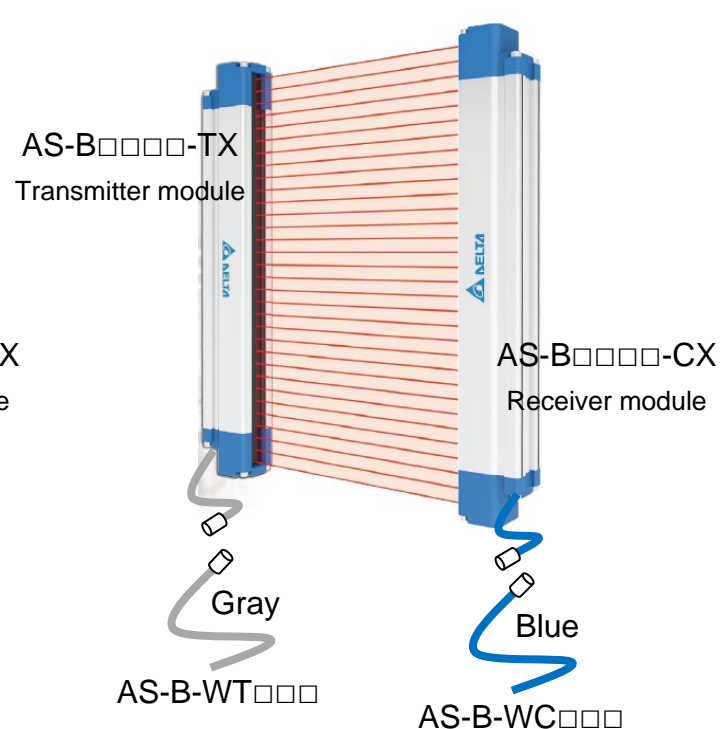

Chapter 1 Product Summary

Model definition

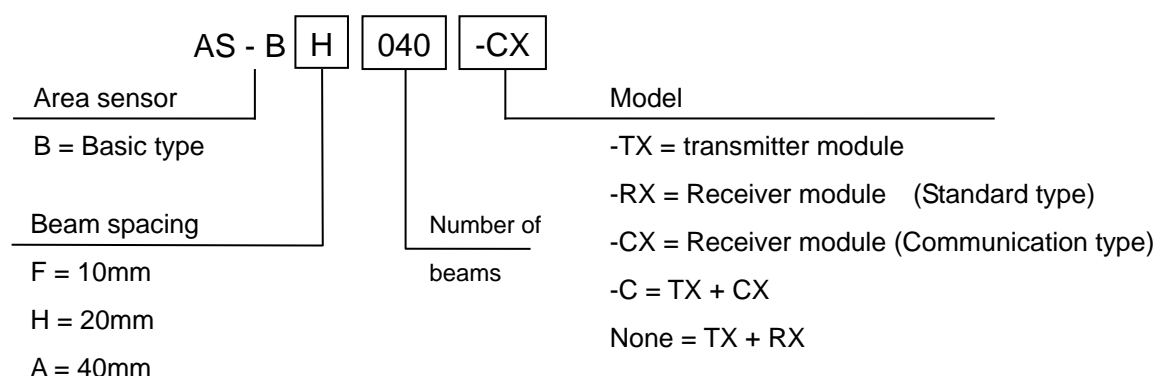


Model information

AS-BF series (Beam spacing: 10 mm; Detection capability: 16.5 mm)				
	Model	Number of beams	Protected height	Detecting distance
Minimum dimensions	AS-BF024 (-C)	24	240	0.1m—5m
	The number of beams increases by 8 with each model number, while the protected height increases by 80 mm			
Maximum dimensions	AS-BF128 (-C)	128	1280	
AS-BH series (Beam spacing: 20 mm; Detection capability : 26.5 mm)				
	Model	Number of beams	Protected height	Detecting distance
Minimum dimensions	AS-BH008 (-C)	8	160	0.1m—10m
	The number of beams increases by 4 with each model number, while the protected height increases by 80 mm			
Maximum dimensions	AS-BH096 (-C)	96	1920	
AS-BA series (Beam spacing: 40mm; Detection capability : 46.5 mm)				
	Model	Number of beams	Protected height	Detecting distance
Minimum dimensions	AS-BA004 (-C)	4	160	0.1m—10m
	The number of beams increases by 2 with each model number, while the protected height increases by 80 mm			
Maximum dimensions	AS-BA036 (-C)	36	1440	

◎ List of models

Protected height (mm)	AS-BF (-C) series	AS-BH (-C) series	AS-BA (-C) series
160		AS-BH008 (-C)	AS-BA004 (-C)
240	AS-BF024 (-C)	AS-BH012 (-C)	AS-BA006 (-C)
320	AS-BF032 (-C)	AS-BH016 (-C)	AS-BA008 (-C)
400	AS-BF040 (-C)	AS-BH020 (-C)	AS-BA010 (-C)
480	AS-BF048 (-C)	AS-BH024 (-C)	AS-BA012 (-C)
560	AS-BF056 (-C)	AS-BH028 (-C)	AS-BA014 (-C)
640	AS-BF064 (-C)	AS-BH032 (-C)	AS-BA016 (-C)
720	AS-BF072 (-C)	AS-BH036 (-C)	AS-BA018 (-C)
800	AS-BF080 (-C)	AS-BH040 (-C)	AS-BA020 (-C)
880	AS-BF088 (-C)	AS-BH044 (-C)	AS-BA022 (-C)
960	AS-BF096 (-C)	AS-BH048 (-C)	AS-BA024 (-C)
1040	AS-BF104 (-C)	AS-BH052 (-C)	AS-BA026 (-C)
1120	AS-BF112 (-C)	AS-BH056 (-C)	AS-BA028 (-C)
1200	AS-BF120 (-C)	AS-BH060 (-C)	AS-BA030 (-C)
1280	AS-BF128 (-C)	AS-BH064 (-C)	AS-BA032 (-C)
1360		AS-BH068 (-C)	AS-BA034 (-C)
1440		AS-BH072 (-C)	AS-BA036 (-C)
1520		AS-BH076 (-C)	
1600		AS-BH080 (-C)	
1680		AS-BH084 (-C)	
1760		AS-BH088 (-C)	
1840		AS-BH092 (-C)	
1920		AS-BH096 (-C)	


◎ Wire information

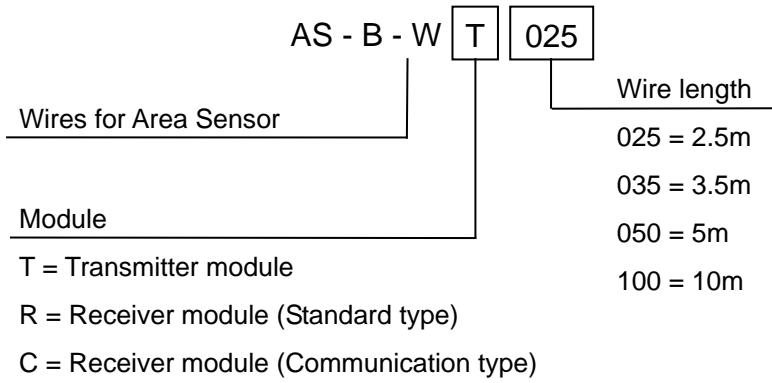

◎ List of wires

Wire length (m)	AS-B-WT (gray wire)	AS-B-WR (black wire)	AS-B-WC (blue wire)
2.5	AS-B-WT025	AS-B-WR025	AS-B-WC025
3.5	AS-B-WT035	AS-B-WR035	AS-B-WC035
5	AS-B-WT050	AS-B-WR050	AS-B-WC050
10	AS-B-WT100	AS-B-WR100	AS-B-WC100

◎ Bracket information (optional)

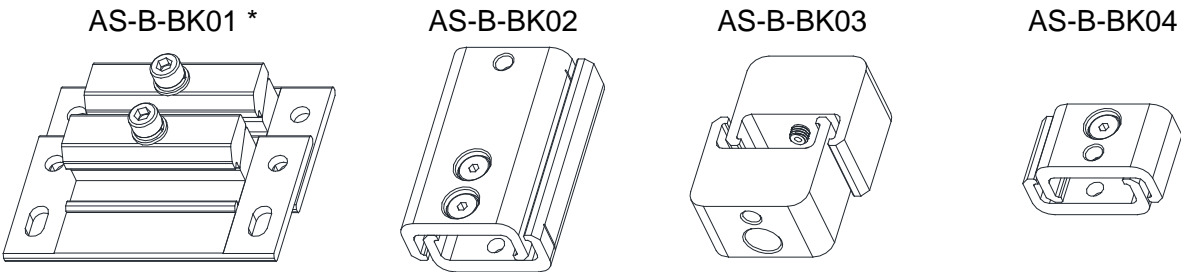

* AS-B series order has included fixed bracket AS-B-BK01 and required quantity


Chapter 2

Product Specifications


◎ Product Specifications

Model	AS-BF	AS-BH	AS-BA
Beam spacing	10mm	20mm	40mm
Detection capability	16.5mm	26.5mm	46.5mm
Detecting distance	0.1 — 5m	0.1 — 10m	0.1 — 10m
Light source	Infrared(850nm)		
Effective aperture angle	Max +/- 5°		
Scan time	Please refer to Table 2-2		
Power voltage	24VDC ± 10%		
Current consumption	Please refer to Table 2-3		
Protection mechanisms	Reverse voltage protection, output over-current protection, input surge protection, output surge protection		
Operating temperature	-10 °C — 55°C (No freezing)		
Storage temperature	-25 °C — 60°C (No freezing)		
Operating relative humidity	30 - 85% RH (No condensation)		
Enclosure rating	IP 67		
Ambient light	10,000 Lux or less		
Vibration resistance	10~55 Hz, 1.5mm, 3 axes for 2 hours		
Shock resistance	Max. 100 m/s ² , 3 axes, 6 directions and 3 times in each.		
Insulation impedance	20 MΩ or more(500VDC)		
Dielectric withstanding voltage	1000 VAC 50/60 Hz 1min		
Material	Case: Aluminum alloy; protection cap: PMMA, end cap: Zinc alloy		
Wires	M12 waterproof connector, 200mm PVC cable		
Certification	CE		


Product exterior and dimensions (Unit: mm)

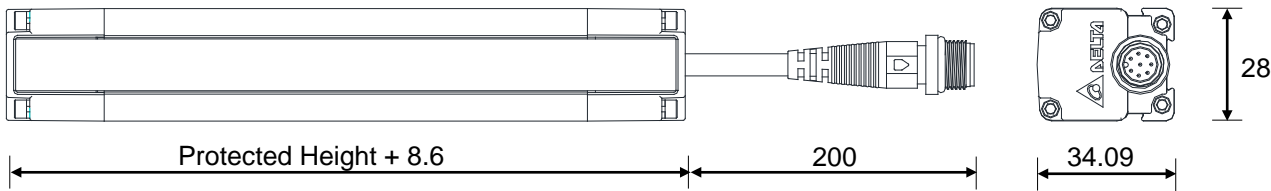

Positions of beams and indicators (unit: mm)

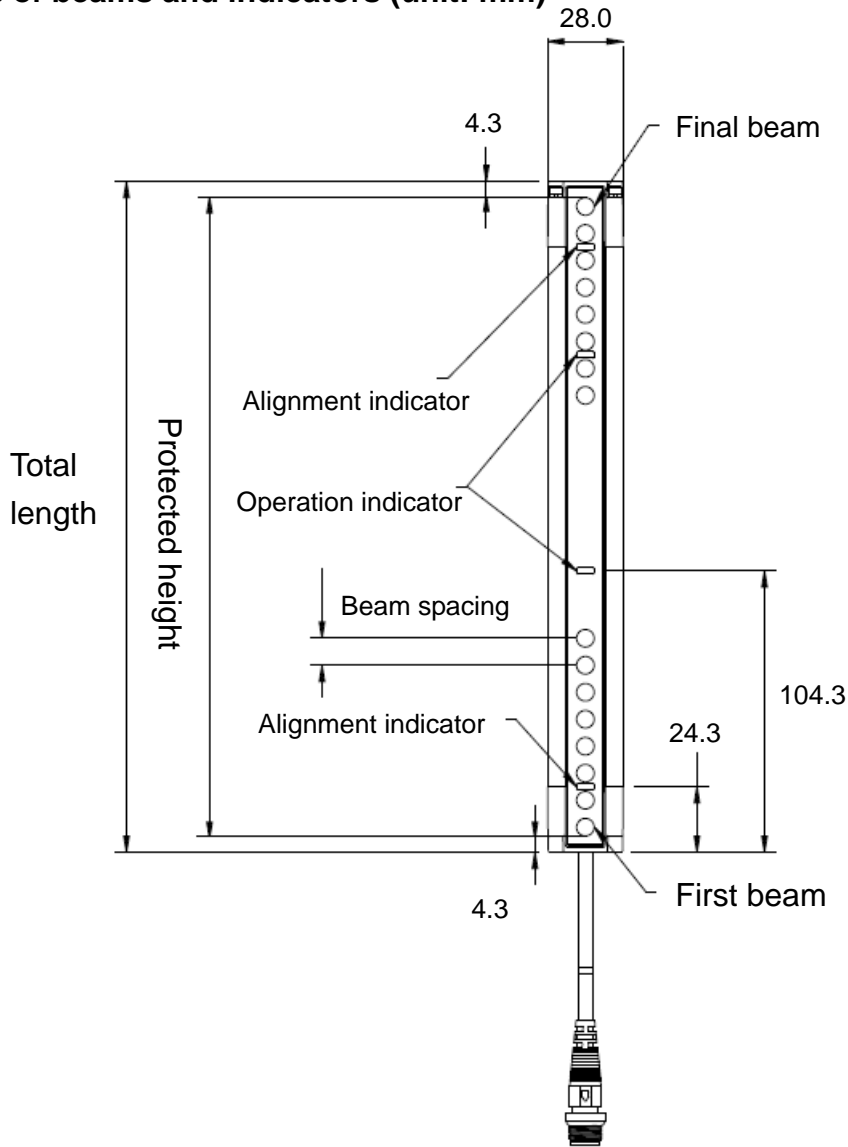


AS-B-BK01 dimensions (unit: mm)

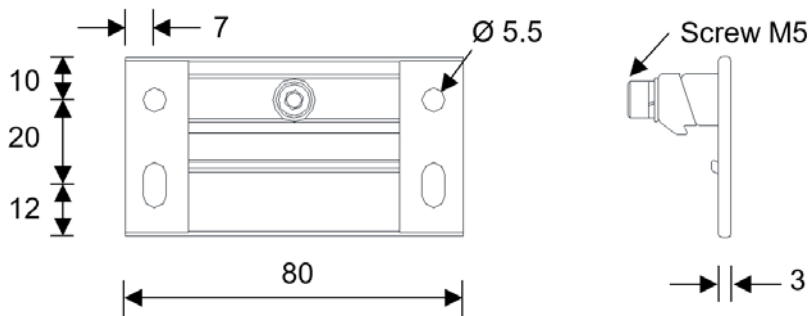

© Description of optical detection capability

Unit: mm

	AS-BF	AS-BH	AS-BA
Beam spacing	10	20	40
Beam diameter	6.5	6.5	6.5
Detection capability	16.5	26.5	46.5

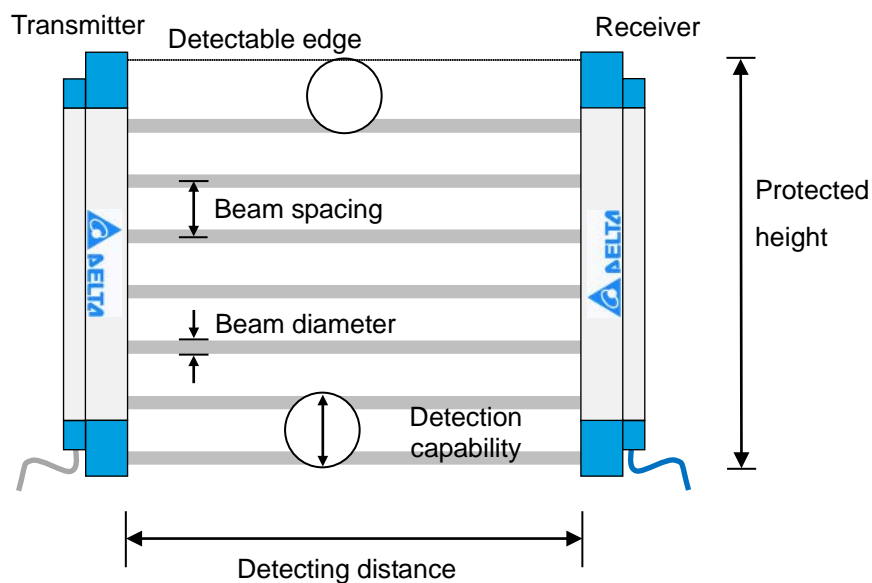

Transmitter : IR LED light emitting channel array.

Receiver : Photodiode light receiving channel array.

Beam spacing : Distance between two beams

Beam diameter : Diameter of lenses transmitting and receiving beams.

Protected height : The distance between the highest point and the lowest point within the limit of object detection capability.

Detecting distance : The distance between transmitter and receiver.

Chapter 2 Product Specifications

◎ Table 2-1 Protected Height and Total Length

◎ Unit: mm

AS-BF series	Protected height	Total length	AS-BH series	Protected height	Total length	AS-BA series	Protected height	Total length
			AS-BH008	160	168.6	AS-BA004	160	168.6
AS-BF024	240	248.6	AS-BH012	240	248.6	AS-BA006	240	248.6
AS-BF032	320	328.6	AS-BH016	320	328.6	AS-BA008	320	328.6
AS-BF040	400	408.6	AS-BH020	400	408.6	AS-BA010	400	408.6
AS-BF048	480	488.6	AS-BH024	480	488.6	AS-BA012	480	488.6
AS-BF056	560	568.6	AS-BH028	560	568.6	AS-BA014	560	568.6
AS-BF064	640	648.6	AS-BH032	640	648.6	AS-BA016	640	648.6
AS-BF072	720	728.6	AS-BH036	720	728.6	AS-BA018	720	728.6
AS-BF080	800	808.6	AS-BH040	800	808.6	AS-BA020	800	808.6
AS-BF088	880	888.6	AS-BH044	880	888.6	AS-BA022	880	888.6
AS-BF096	960	968.6	AS-BH048	960	968.6	AS-BA024	960	968.6
AS-BF104	1040	1048.6	AS-BH052	1040	1048.6	AS-BA026	1040	1048.6
AS-BF112	1120	1128.6	AS-BH056	1120	1128.6	AS-BA028	1120	1128.6
AS-BF120	1200	1208.6	AS-BH060	1200	1208.6	AS-BA030	1200	1208.6
AS-BF128	1280	1288.6	AS-BH064	1280	1288.6	AS-BA032	1280	1288.6
			AS-BH068	1360	1368.6	AS-BA034	1360	1368.6
			AS-BH072	1440	1448.6	AS-BA036	1440	1448.6
			AS-BH076	1520	1528.6			
			AS-BH080	1600	1608.6			
			AS-BH084	1680	1688.6			
			AS-BH088	1760	1768.6			
			AS-BH092	1840	1848.6			
			AS-BH096	1920	1928.6			

◎ **Table 2-2 Basic Scan Cycle Reference**

Unit: ms

AS-BF series	Time	AS-BH series	Time	AS-BA series	Time
		AS-BH008	1.7	AS-BA004	1.3
AS-BF024	3.5	AS-BH012	2.2	AS-BA006	1.5
AS-BF032	4.4	AS-BH016	2.6	AS-BA008	1.7
AS-BF040	5.4	AS-BH020	3.1	AS-BA010	1.9
AS-BF048	6.3	AS-BH024	3.5	AS-BA012	2.2
AS-BF056	7.0	AS-BH028	4.0	AS-BA014	2.4
AS-BF064	8.1	AS-BH032	4.4	AS-BA016	2.6
AS-BF072	9.0	AS-BH036	4.9	AS-BA018	2.9
AS-BF080	10.0	AS-BH040	5.4	AS-BA020	3.1
AS-BF088	10.9	AS-BH044	5.8	AS-BA022	3.3
AS-BF096	11.7	AS-BH048	6.3	AS-BA024	3.5
AS-BF104	12.6	AS-BH052	6.7	AS-BA026	3.8
AS-BF112	13.4	AS-BH056	7.0	AS-BA028	4.0
AS-BF120	14.4	AS-BH060	7.6	AS-BA030	4.2
AS-BF128	15.4	AS-BH064	8.1	AS-BA032	4.4
		AS-BH068	8.6	AS-BA034	4.7
		AS-BH072	9.0	AS-BA036	4.9
		AS-BH076	9.5		
		AS-BH080	10.0		
		AS-BH084	10.4		
		AS-BH088	10.9		
		AS-BH092	11.3		
		AS-BH096	11.7		

Chapter 2 Product Specifications

◎ Table 2-3 Current consumption @24V

Unit: mA

AS-BF series	* Current	AS-BH series	* Current	AS-BA series	* Current
		AS-BH008	36	AS-BA004	37
AS-BF024	68	AS-BH012	46	AS-BA006	47
AS-BF032	76	AS-BH016	51	AS-BA008	52
AS-BF040	89	AS-BH020	61	AS-BA010	62
AS-BF048	97	AS-BH024	66	AS-BA012	67
AS-BF056	110	AS-BH028	76	AS-BA014	77
AS-BF064	118	AS-BH032	81	AS-BA016	82
AS-BF072	131	AS-BH036	91	AS-BA018	92
AS-BF080	139	AS-BH040	97	AS-BA020	97
AS-BF088	152	AS-BH044	106	AS-BA022	107
AS-BF096	160	AS-BH048	112	AS-BA024	112
AS-BF104	173	AS-BH052	122	AS-BA026	122
AS-BF112	181	AS-BH056	127	AS-BA028	128
AS-BF120	195	AS-BH060	137	AS-BA030	138
AS-BF128	203	AS-BH064	142	AS-BA032	143
		AS-BH068	152	AS-BA034	153
		AS-BH072	157	AS-BA036	158
		AS-BH076	167		
		AS-BH080	172		
		AS-BH084	182		
		AS-BH088	187		
		AS-BH092	197		
		AS-BH096	202		

*Not including controlled output current



Chapter 3

Installation and Use


Note: Before using this product, please read Chapter 6 Safety Precautions and then perform the following operations.

◎ Installing product onto mounting frame

1. Match the product exactly to the plane of the bracket.
2. The screws are indeed locked.

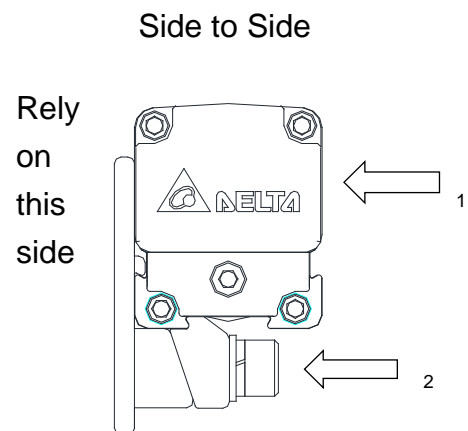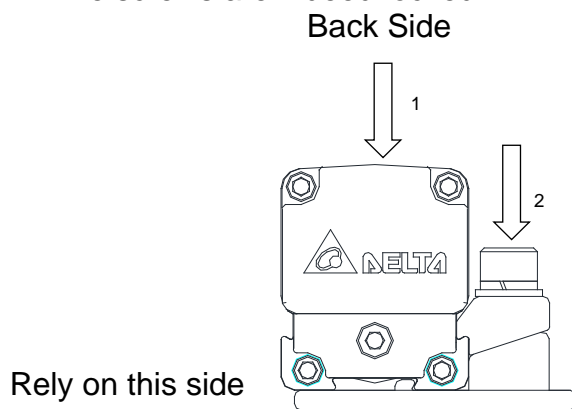

◎ AS-B □□□□ (-C) Wiring instructions

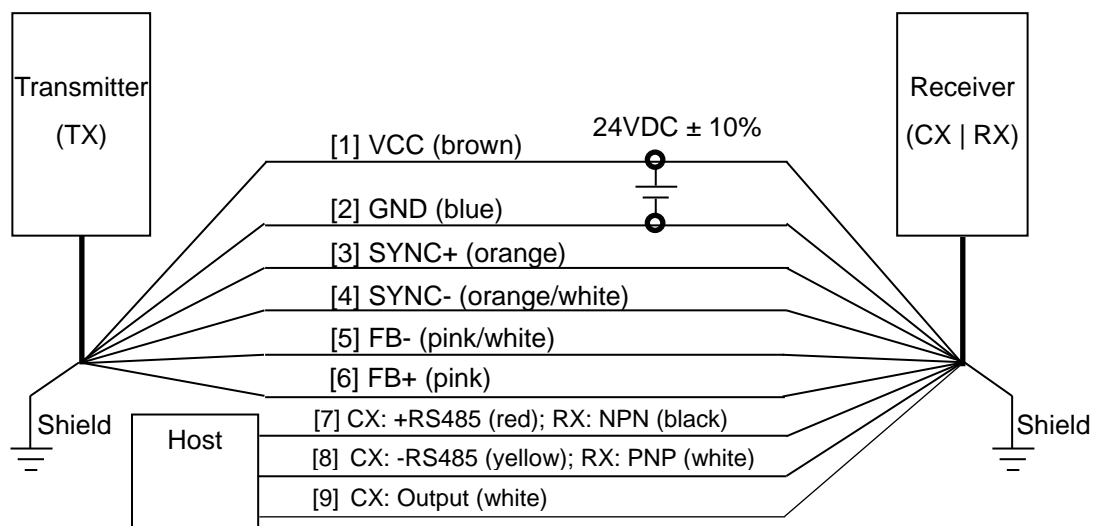

(CX: communication type; RX: standard type)

Terminology:

VCC : Supply voltage 24V

GND : 0V

SYNC+ / SYNC- : Synchronized signal to the transmitter

FB+ / FB- : Feedback signal from the transmitter

Chapter 3 Installation and Use

RX_NPN : NPN output

RX_PNP : PNP output

CX_RS485+/RS485- : MODBUS ASCII/RTU


CX_Output : Can be set to NPN, PNP or Push-Pull via communication setting

Shielding : Must be connected to a clean ground for guiding the external interference signal away and shield from interference

◎ Power-on sequence


1. Power on the transmitter
2. Power on the receiver

◎ Description of positions of indicators:

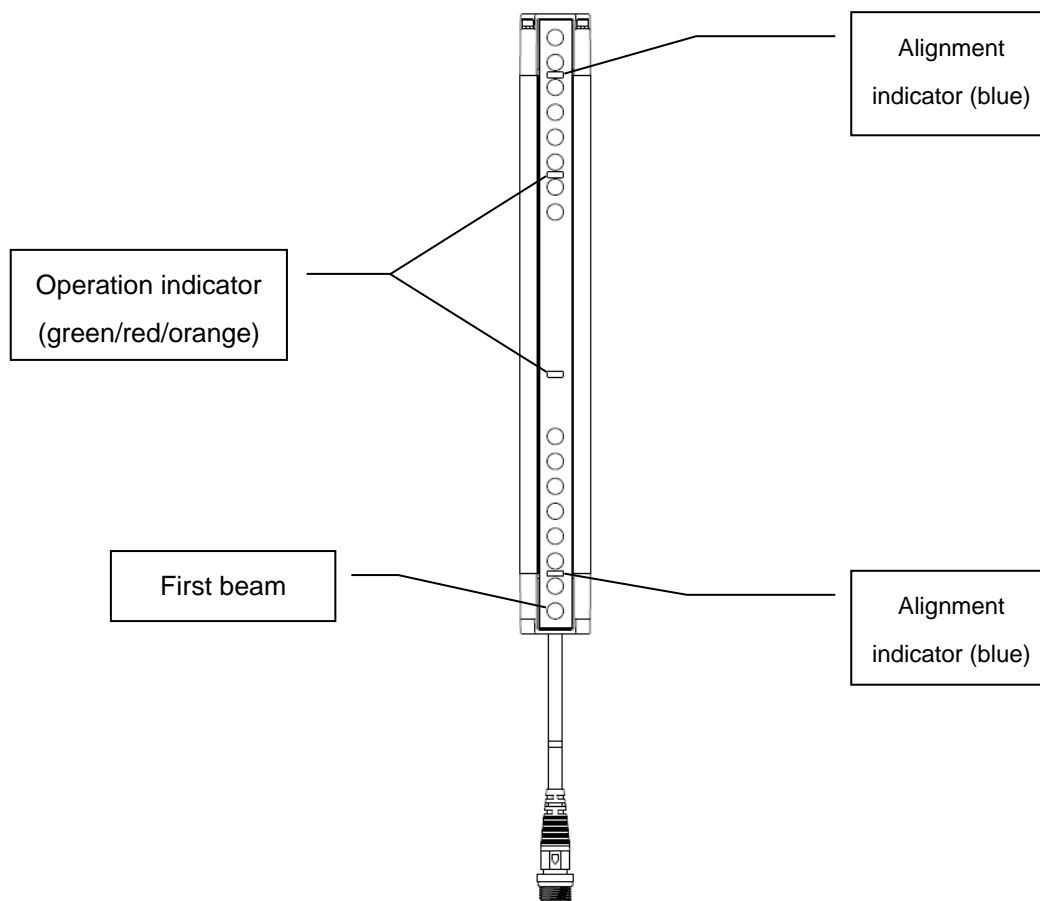

◎ **Three steps for easy alignment:**

1. Align one beam first, so that the corresponding indicator (blue) lights up.
2. Then align the other beam so that the alignment indicators (blue) on both sides are lit at the same time.
3. Rotate fine-tuning knob to change the operation indicator from red to green.

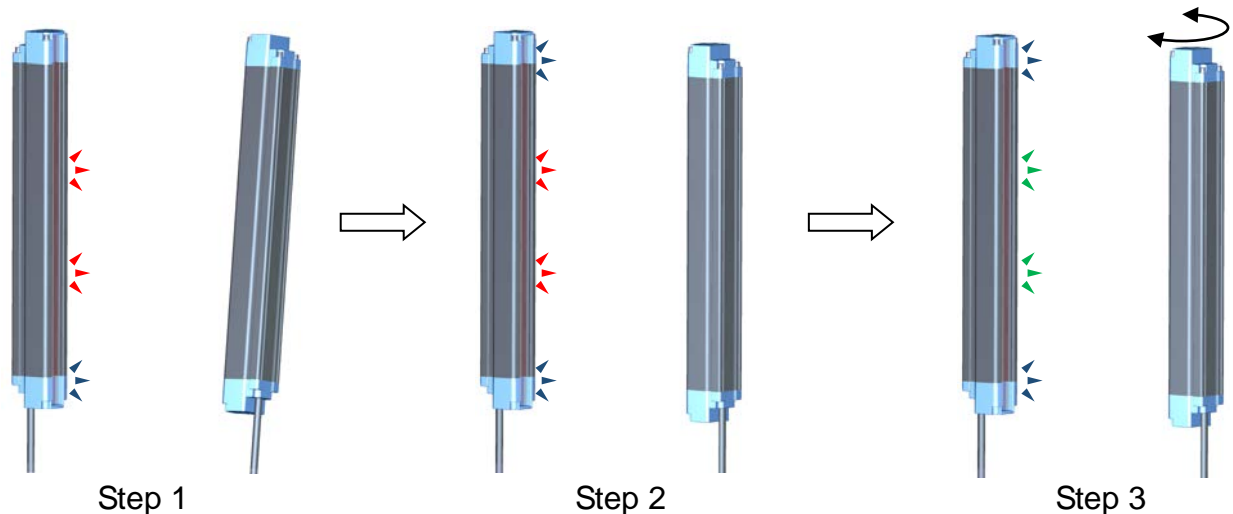

- ◎ **Operation mode in Standard type :** When the product is in normal use, it will be fixed in the ON/OFF mode. When an abnormality is diagnosed, it enters the stop mode.
- ◎ **Operation mode in Communication type :**
- 0 Stop mode : There will not be any scan, the orange light is displayed, and the output is fixed at OFF state.
 - 1 ON/OFF mode : Check if there is any object shading in the detection area and self-diagnosis . When the product is in normal use, the output is OFF after shading, and the output is ON when it is non-shading. In the same scanning cycle, detection of non-shading/shading of object and self-diagnosis will be detected simultaneously; once the product itself detects an abnormality, it will immediately switch to the stop mode and the output will remain in the OFF state. In this mode, the fixed/floating blanking and interlock function can be used together.
 - 2 Measurement mode : When full beam are non-shading, output action ON (green light flashing once per second), any beam is shading or abnormal happened, output OFF (red light flashing once per second). Simultaneously detect Voltage, FB and shading status in the same of scan cycle.
 - 3 FB diagnosis mode : Detects whether or not each beam's feedback signal is normal. When diagnosis is normal, green light will flash three times every two seconds. When diagnosis is abnormal, red light will flash three times every two seconds, and output will be fixed as OFF.
 - 4 Voltage diagnosis mode : Detects whether or not the internal/external voltage signal is normal. When diagnosis is normal, green light will flash four times every two seconds. When diagnosis is abnormal, red light will flash four times every two seconds, and output will be fixed as OFF.

- 5 Scan / diagnosis mode : Sequentially detect non-shading/shading of object, Feedback signal and Voltage diagnosis. When the product is normal, the output is ON, otherwise the output is OFF. Constant light in non-shading status, flashes once per second in shading status. The time of scan cycle in mode 5 is three times basic time.

※ **Note: Before mode switching, disconnect product output contact from the host, in order to prevent output malfunction and damage.**

- ◆ After switching from 0 or 1 to other modes, will enter stop mode, and must be powered on again to complete switching.
- ◆ After switching from 2,3,4 to 1, will enter the stop mode, and must be powered on again to complete switching.
- ◆ 2,3,4 can be directly switched without necessity of being powered on again.

◎ Description of indicator display and output status

Operation mode	Status description	Output status	Alignment indicator	Operation indicator			*Indicates Flashing state
			Blue light	Orange light	Green light *	Red light *	
0 : Stop	Abnormality diagnosed or stop	OFF		V			Fixed
1: ON/OFF (Default)	Full non-shading	ON	V		V		Fixed
	Full non-shading (power saving)	ON	V				
	Full non-shading (over-current)	OFF	V		V	V	
	Shading	OFF	O			V	
	Abnormal number of beams	OFF			V	V	
2: Measurement	Full non-shading	ON	V		V		Once per second
	Full non-shading (power saving)	ON	V				
	Full non-shading (over-current)	OFF	V		V	V	
	Shading	OFF	O			V	
2: Measurement (Active upload)	Full non-shading	ON	V		V		Once every two scans
	Shading	OFF	O			V	
3: Feedback diagnosis	Normal	OFF			V		Three times every two seconds
	Abnormal	OFF				V	
4: Voltage diagnosis	Normal	OFF			V		Four times every two seconds
	Abnormal	OFF				V	
5: Scan and diagnosis	Full non-shading	ON	V		V		Fixed
	Full non-shading (over-current)	OFF	V		V	V	
	Shading	ON	O			V	Once per second
	Shading (over-current)	OFF	O		V	V	
	Abnormal number of beams	OFF			V	V	Fixed
	Feedback/Voltage abnormal and switch to Stop mode	OFF		V			

O : Indicates lit or not; * : Indicates flashing state

Note: In mode 3, 4, 5 , the output status only change by the result of diagnosis. NOT shading or not. DON'T be as the basis for starting the machine.

◎ Description of output mode



1 : ON/OFF 2 : measurement mode	Full non-shading ON	Shading OFF / Diagnosis of abnormality
NPN (Default)	Ground	Vcc
PNP	Vcc	Ground
Push-Pull	Vcc	Ground

5: Scan and diagnosis	Normal operation (Shading or non-shading)	Diagnosis of abnormality / Over Current
NPN (Default)	Ground	Vcc
PNP	Vcc	Ground
Push-Pull	Vcc	Ground

◎ Installation instructions not affected by the mirror


Safe installation distance

Detection distance X	Minimum installation distance Y
< 3m	0.262 m
> 3m	$X * \tan 5^\circ$

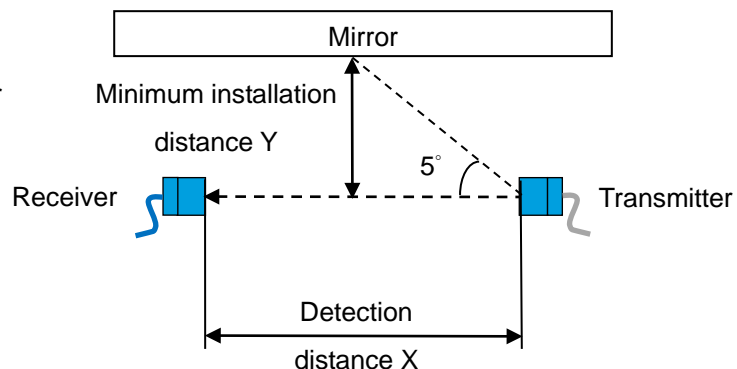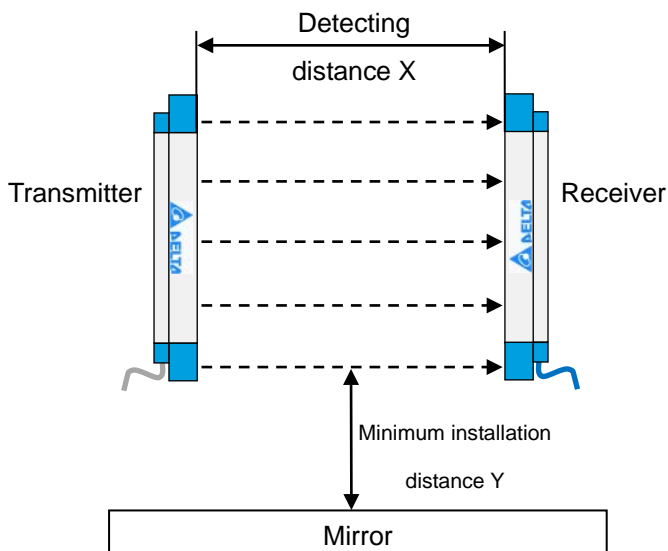


◎ Installation instructions for multiple adjacent sets


- Set the shade to avoid interference from adjacent light sources.

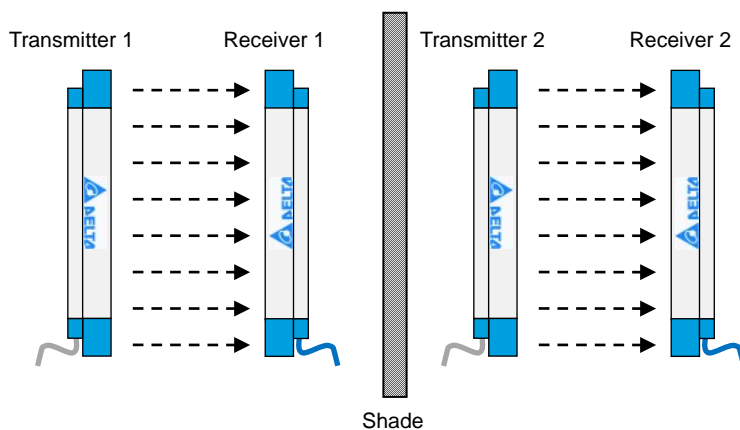


- Staggered left/right installation to avoid interference from adjacent light sources.

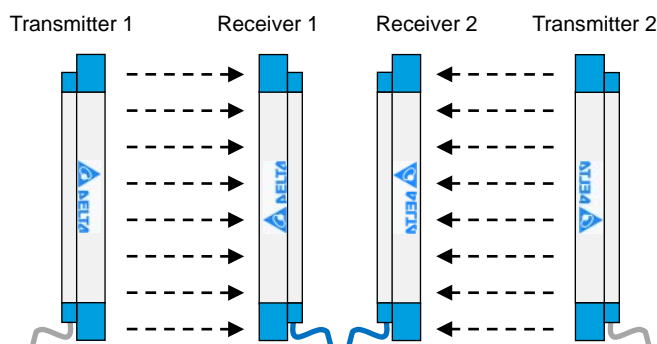

- Staggered up/down installation to avoid interference from adjacent light sources.

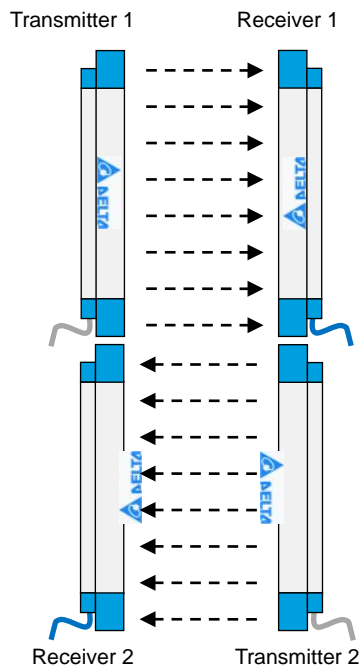


- Staggered front/rear installation to avoid interference from adjacent light sources.

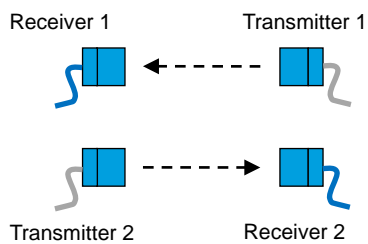

◎ Description of functions

- ◆ Fixed mask function : When the optical axis blocks a fixed optical beam during device installation, these specific beams can be turned off via the settings, so that other beams can be used normally. It can also be used to detect whether or not parcel height is exceeded. Beams below the detection height can be closed, so that other beams can be used normally, and the object will be detected when it exceeds the detection height. The default setting is full beam enabled.

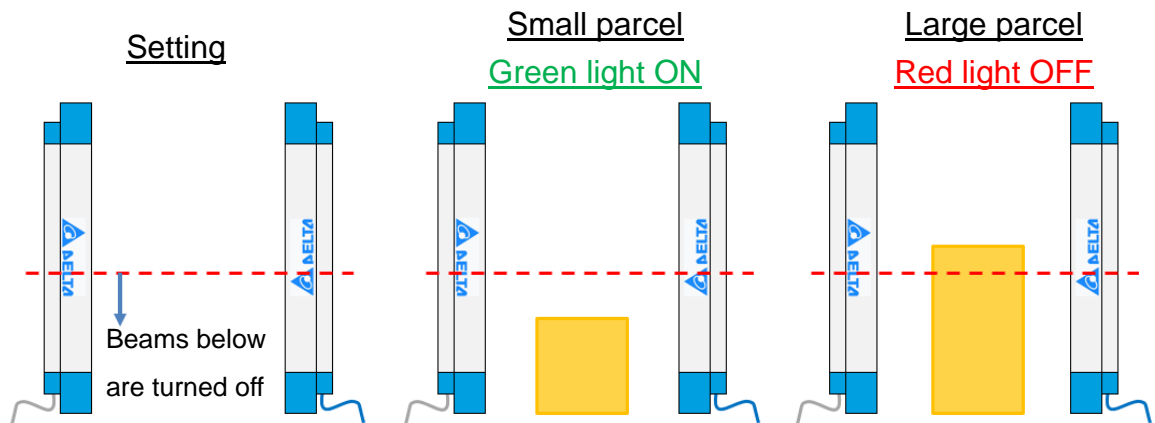

- ◆ Floating mask function : It is applied to the detection of obstacles in an unfixed position, such as detecting whether object length is exceeded, but the object may fall anywhere within the range. (The set value must be less than half of the total number of beams)

Set floating mask number is 10

Shading <10 (position not restricted)

Green light ON



6 beams
block



Set floating mask number is 10

Shading <10 (position not restricted)

Green light ON



8 beams
block



Set floating mask number is 10

Shading >10

Red light OFF




12 beams block




Chapter 3 Installation and Use

- ◆ Interlocking function : Once shading occurs, the output remains in the OFF state; once full non-shading occurs, the reset interlock function is executed, and only then is the ON state restored.

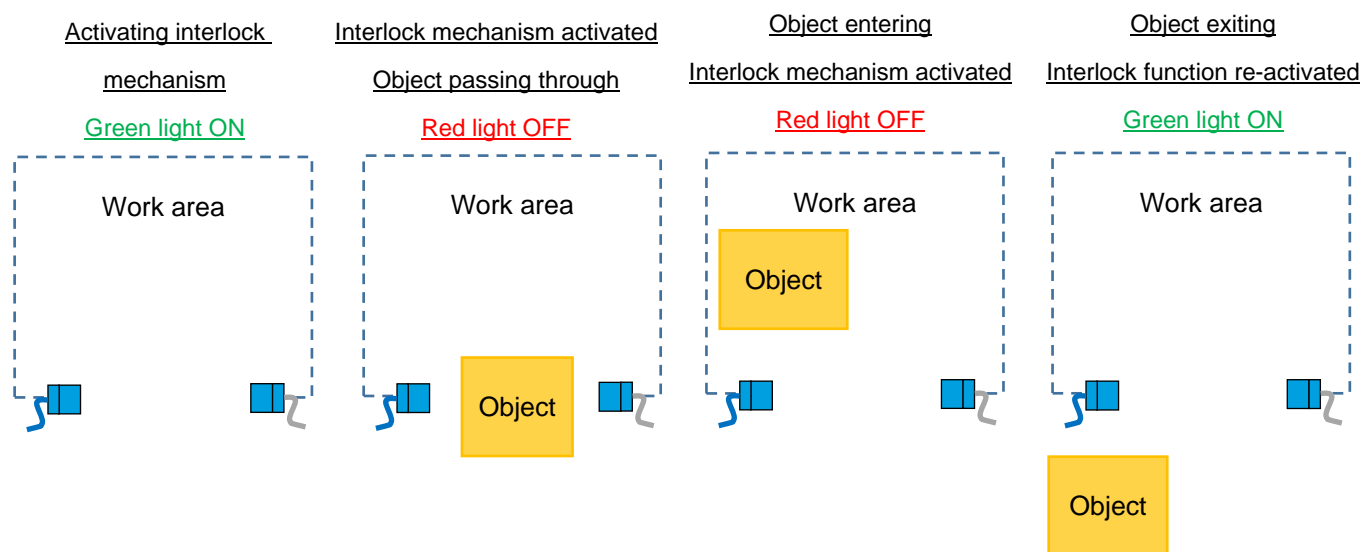

- ◆ Energy-saving function: Cancels green light indicator; when object is blocked, red light will still be lit

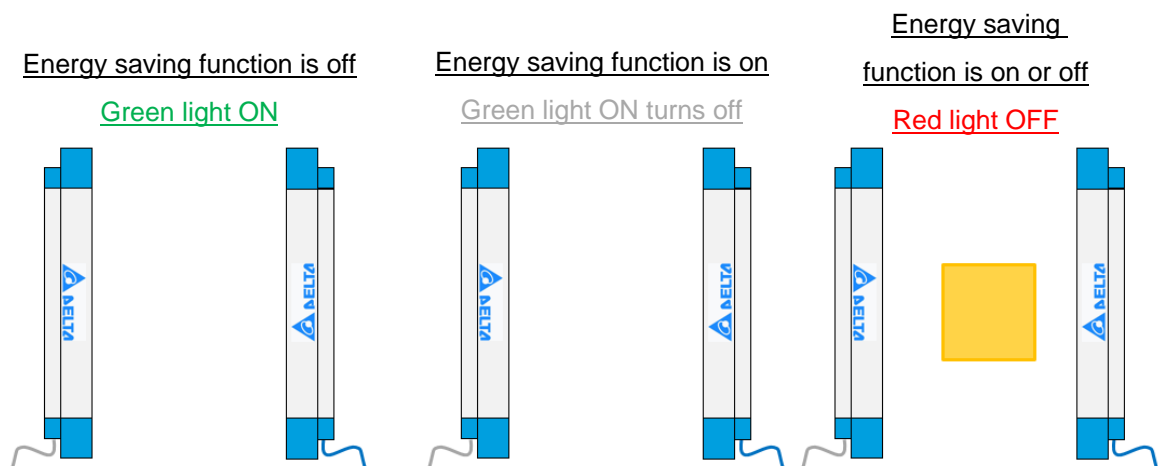

Chapter 4

Communication protocol

4.1 List of Communication Parameters

◎ Communication via RS485

- Supported Baud Rates: 9600, 14400, 19200, 38400 (default), 57600 bps
- Supported Modbus communication formats:
 ASCII: 8,N,1, 8,O,1, 8,E,1, 8,N,2, 8,O,2, 8,E,2
 RTU: 8,N,1(default), 8,O,1, 8,E,1, 8,N,2, 8,O,2, 8,E,2
- Supported communication addresses: 1 (default) - 247
- Supported function codes: 03H, 06H

Before setting, the product output must be disconnected from the host; after setting, to avoid danger, it must be actually tested to see if it meets requirement before the product output can be connected to the host.

Function	Position	Read/write	Name	Description of numerical value
Basic	0000H — 0001H	R	Firmware version	Address 0000H (High) and 0001H (Low) Read back value 00XXH (High) and 00YYH (Low) Version is XXYYH
	002BH	W	Entering firmware upgrade procedure	1: Entering firmware upgrade
	0080H	R	Reading model	2 : AS-B
Communication format setting (Example 1)	0081H	R/W	Modbus communication address	Default setting is 1; setting range is 1 - 247
	0082H	R/W	Modbus Baud Rate (bps)	1: 9600 2: 14400 3: 19200 4: 38400 (Default) 5: 57600
	0083H	R/W	Modbus communication format	1: ASCII, 8, N, 1 2: ASCII, 8, O, 1 3: ASCII, 8, E, 1 4: ASCII, 8, N, 2 5: ASCII, 8, O, 2

				6: ASCII, 8, E, 2 11. RTU, 8, N, 1 (Default) 12. RTU, 8, O, 1 13. RTU, 8, E, 1 14. RTU, 8, N, 2 15. RTU, 8, O, 2 16. RTU, 8, E, 2
	0084H	W	Execution of Modbus communication write	1: Execution of communication write Previous setting of communication don't be activated before executing this command.
Floating blanking (Example 2)	0085H	R/W	Setting the number of floating blanking beams (Limited to ON/OFF operation mode)	0 (default) - number of beams/2 Takes effect immediately after setting
Interlock (Example 4)	0086H	R/W	Interlock function (Limited to ON/OFF operation mode)	0: Off (Default) 1: Activated Takes effect immediately after setting
	0087H	W	Restart interlock function (Limited to ON/OFF operation mode; can only be carried out when green light is on)	1: Restart
Energy saving function	0088H	R/W	Activate energy saving function (Limited to ON/OFF and measurement operation mode)	0: Turn off (default) 1: Activate energy saving function (The indicator of green LED are disable)
Output (Example 5)	0089H	R/W	Output setting	0: NPN (Default) 1: PNP 2: Push-Pull Does not change after setting; only takes effect after it is powered on again.
Operation mode (Example 6)	008AH	R/W	Operation mode	0: Stop mode (orange light) 1: ON/OFF mode (constant light) 2: Measurement mode (default)

				<p>(flashes once per second)</p> <p>3: FB signal diagnosis mode (flashes three times every two seconds)</p> <p>4: Voltage diagnosis mode (flashes four times every two seconds)</p> <p>5: Scan / diagnosis mode (constant light in non-shading status, flashes once per second in shading status)</p>
Active upload (Example 8)	008BH	W	Activate automatic upload function (Limited to measurement operation mode)	<p>0: Off</p> <p>1: Activated and disable when restart After every scan, the scan result will auto-upload according to the setting data content; scan time and content of upload must be set before use; once activated, product cannot receive any commands. After entering active upload procedure, indicator will flash once every two scans. Note: After re-start, this function is in OFF state.</p> <p>2: Activated and keep when restart After re-start, the product will scan and diagnosis at first then active the function. It will enter stop mode in this re-start period when abnormal happened. The function can be disable in stop mode.</p> <p>V1030 Add 2</p>
	008CH	R/W	Setting automatic upload data content (Limited to measurement operation mode)	<p>0: The status of each beam Data length = ((the number of beams-1)/8 + 1) Every bit in the data represents the</p>

				<p>corresponding beam.</p> <p>1 represents shading</p> <p>0 represents non-shading</p> <p>1: Content is composed by the following package: First shading beam; final shading beam; total shading number; and total shading length (cm)</p>
	008DH	R/W	<p>Setting delay time 1 (0.1msec)</p> <p>(Limited to automatic upload application in measurement operation mode)</p>	<p>After scanning and data upload, delay the time of time1.</p> <p>Maximum value is 255; can be used in coordination with delay time 2.</p> <p>Set value*0.1=delay time 1 (msec)</p>
	008EH	R/W	<p>Setting delay time 2 (1msec)</p> <p>(Limited to automatic upload application in measurement operation mode)</p>	<p>After scanning and data upload, delay the time of time2</p> <p>Maximum value is 255; can be used in coordination with delay time 1.</p> <p>Set value*1=delay time 2 (msec)</p>
Number of shading beams	0090H	R	<p>Number of shading beams</p> <p>(Limited to measurement operation mode)</p>	<p>Total number of current shading beams. If fixed blanking is set, the beam will not be counted.</p>
Shading length	0091H	R	<p>Shading length</p> <p>(Limited to measurement operation mode)</p>	<p>Total number of shading beams multiplied by beam pitch</p> <p>Unit cm</p>
ON/OFF Delay	0092H	R/W	<p>Output ON Delay</p> <p>(Limited to measurement operation mode)</p> <p>(Includes version v1005 and later)</p>	<p>When detection is changed from OFF to ON, the number of consecutive ON must exceed the number of this setting then the result will output ON.</p> <p>Unit is the cycle of one scan (time).</p> <p>Default value is 0, which means this function is turned off.</p> <p>Maximum value is 255.</p>
	0093H	R/W	<p>Output OFF Delay</p> <p>(Limited to measurement</p>	<p>When detection is changed from ON to OFF, the number of</p>

			operation mode) (Includes version v1005 and later)	consecutive OFF must exceed the number of this setting then the result will output OFF. Unit is the cycle of one scan (time). Default value is 0, which means this function is turned off. Maximum value is 255.
Hole detection (Example 9)	00A0H	R	First shading beam (Limited to mode 2 and 5) (Includes version v1021 and later)	FirstOFFCh position of first shading beam Cannot be used simultaneously with fixed blanking
	00A1H	R	Final shading beam (limited to mode 2 and 5) (Includes version v1021 and later)	LastOFFCh position of final shading beam Cannot be used simultaneously with fixed blanking
	00A2H	R	The number from the first shading beam to the final one. (Ignore the hole between the first shading beam and the final one) (Limited to mode 2 and 5) (Includes version v1021 and later)	LastOFFCh – FirstOFFCh + 1 Cannot be used simultaneously with fixed blanking
	00A3H	R	Total length from the first shading beam to the final one. (Ignore the hole between the first shading beam and the final one) (Limited to mode 2 and 5) (Includes version v1021 and later)	(LastOFFCh – FirstOFFCh + 1)* (Beam pitch) Unit is cm Cannot be used simultaneously with fixed blanking
	00A4H	R	The last hole (Limited to mode 2 and	Cannot be used simultaneously with fixed blanking

			5) (Includes version v1021 and later)	
	00A5H	R	The last shading (Limited to mode 2 and 5) (Includes version v1021 and later)	Cannot be used simultaneously with fixed blanking
	00A6H	R	The second last hole (Limited to mode 2 and 5) (Includes version v1021 and later)	Cannot be used simultaneously with fixed blanking
	00A7H	R	The second last shading (Limited to mode 2 and 5) (Includes version v1021 and later)	Cannot be used simultaneously with fixed blanking
	00A8H	R	The third last hole (Limited to mode 2 and 5) (Includes version v1021 and later)	Cannot be used simultaneously with fixed blanking
	00A9H	R	The third last shading (Limited to mode 2 and 5) (Includes version v1021 and later)	Cannot be used simultaneously with fixed blanking
	00AAH	R	The fourth last hole (Limited to mode 2 and 5) (Includes version v1021 and later)	Cannot be used simultaneously with fixed blanking
	00ABH	R	The fourth last shading (Limited to mode 2 and 5) (Includes version v1021 and later)	Cannot be used simultaneously with fixed blanking
	00ACH	R	The fifth last hole	Cannot be used simultaneously

			(Limited to mode 2 and 5) (Includes version v1021 and later)	with fixed blanking
	00ADH	R	The fifth last shading (Limited to mode 2 and 5) (Includes version v1021 and later)	Cannot be used simultaneously with fixed blanking
	00AEH	R	The sixth last hole (Limited to mode 2 and 5) (Includes version v1021 and later)	Cannot be used simultaneously with fixed blanking
Fixed blanking (Example 3)	0030H ~ 003FH	R/W	Fixed blanking Channel (Limited to ON/OFF and measurement operation mode)	Low Byte, from high to low bit, represents the set values of 8 beams respectively 1: Enabled (default) 0: Ignore 0030H corresponds to beams 8—1 0031H corresponds to beams 16—9 0032H corresponds to beams 24—17 0033H corresponds to beams 32—25 0034H corresponds to beams 40—33 0035H corresponds to beams 48—41 0036H corresponds to beams 56—49 0037H corresponds to beams 64—57 0038H corresponds to beams 72—65 0039H corresponds to beams 80—73 003AH corresponds to beams 88—81 003BH corresponds to beams 96—89 003CH corresponds to beam 104—97 003DH corresponds to beam 112—105 003EH corresponds to beams 120—113 003FH corresponds to beams 128—121
The status of	0040H —	R	The status of TX beam	High Byte represents mode

channel in transmitter module	004FH		(Limited to measurement/FB/voltage diagnosis operation mode)	<p>2: Measurement mode</p> <p>3: FB diagnosis mode</p> <p>4: Voltage diagnosis mode</p> <p>Low Byte, from high to low bit, represents the state values of 8 beams</p> <p>1: PASS</p> <p>0: FAIL</p> <p>0040H corresponds to beams 8—1</p> <p>0041H corresponds to beams 16—9</p> <p>0042H corresponds to beams 24—17</p> <p>0043H corresponds to beams 32—25</p> <p>0044H corresponds to beams 40—33</p> <p>0045H corresponds to beams 48—41</p> <p>0046H corresponds to beams 56—49</p> <p>0047H corresponds to beams 64—57</p> <p>0048H corresponds to beams 72—65</p> <p>0049H corresponds to beams 80—73</p> <p>004AH corresponds to beams 88—81</p> <p>004BH corresponds to beams 96—89</p> <p>004CH corresponds to beams 104—97</p> <p>004DH corresponds to beams 112—105</p> <p>004EH corresponds to beams 120—113</p> <p>004FH corresponds to beams 128—121</p>
The status of channel in receiver module (Example 7)	0050H — 005FH	R	The status of RX beam (Limited to measurement/FB/voltage diagnosis operation mode)	<p>High Byte represents mode</p> <p>2: Measurement mode</p> <p>3: FB diagnosis mode</p> <p>4: Voltage diagnosis mode</p> <p>Low Byte, from high to low bit, represents the state values of 8 beams</p> <p>1: PASS or Non-shading</p> <p>0: FAIL or Shading</p> <p>0050H corresponds to beams 8—1</p> <p>0051H corresponds to beams 16—9</p>

				<p>0052H corresponds to beams 24—17</p> <p>0053H corresponds to beams 32—25</p> <p>0054H corresponds to beams 40—33</p> <p>0055H corresponds to beams 48—41</p> <p>0056H corresponds to beams 56—49</p> <p>0057H corresponds to beams 64—57</p> <p>0058H corresponds to beams 72—65</p> <p>0059H corresponds to beams 80—73</p> <p>005AH corresponds to beams 88—81</p> <p>005BH corresponds to beams 96—89</p> <p>005CH corresponds to beams 104—97</p> <p>005DH corresponds to beams 112—105</p> <p>005EH corresponds to beams 120—113</p> <p>005FH corresponds to beams 128—121</p>
The light status of channel in receiver module (Includes version v1021 and later)	0060H — 006FH	R	The light status of RX beam (Limited to ON/OFF, measurement and scan diagnosis operation mode)	<p>High Byte represents mode</p> <ul style="list-style-type: none"> 1: ON/OFF mode 2: Measurement mode 5: Scan/diagnosis mode <p>Low Byte, from high to low bit, represents the state values of 8 beams</p> <ul style="list-style-type: none"> 1: PASS 0: FAIL <p>0050H corresponds to beams 8—1</p> <p>0051H corresponds to beams 16—9</p> <p>0052H corresponds to beams 24—17</p> <p>0053H corresponds to beams 32—25</p> <p>0054H corresponds to beams 40—33</p> <p>0055H corresponds to beams 48—41</p> <p>0056H corresponds to beams 56—49</p> <p>0057H corresponds to beams 64—57</p> <p>0058H corresponds to beams 72—65</p> <p>0059H corresponds to beams 80—73</p> <p>005AH corresponds to beams 88—81</p> <p>005BH corresponds to beams 96—89</p>

				005CH corresponds to beams 104—97 005DH corresponds to beams 112—105 005EH corresponds to beams 120—113 005FH corresponds to beams 128—121
--	--	--	--	---

4.2 Description of Communication Function

◎ Example 1. Change the format of Modbus communication

- Change the communication format to address 2, Baud Rate to 19200, and format to 8,E,1; the procedure is as shown below

Sequence of executed action	ASCII	RTU
Change address to 2	:01060081000276	01 06 00 81 00 02 58 23
Change Baud Rate to 19200	:01060082000374	01 06 00 82 00 03 69 E3
Change format to 8,E,1	:01060083000373	01 06 00 83 00 03 38 23
Execute communication confirmation action	:01060084000174	01 06 00 84 00 01 08 23

◎ Example 2. Floating blanking function (limited to ON/OFF operation mode):

- Note: Takes effect immediately after setting. Disconnect product output contact from the host before setting, in order to prevent malfunction and damage.
- Description: Only when the number of shielded beams exceeds the set value will the output be ON.
- Setting: Default value 0 indicates turn off floating blanking function; maximum value cannot exceed half the product's number of beams.

Executed action	ASCII	RTU
Set floating blanking number to 3	:01060085000371	01 6 00 85 00 03 D8 22

Example 3. Fixed blanking function (Limited to ON/OFF and measurement operation mode):

- Note: Takes effect immediately after setting. Disconnect product output contact from the host before setting, in order to prevent malfunction and damage.
- Description: Turn off designated beam detection. Non-shading/shading status of this beam will not affect the output action.

- Setting: Default 1 indicates that beam detection is turned on; 0 indicates that beam detection is turned off.

Executed action	ASCII	RTU
Turns off detection for beams 1-4.	:0106003000F0D9	01 06 00 30 00 F0 89 81

◎ Example 4. Interlock/restart interlock function (limited to ON/OFF operation mode):

- Note: Takes effect immediately after setting. Disconnect product output contact from the host before setting, in order to prevent malfunction and damage.
- Description: Once shading occurs, output remains in OFF state; after full non-shading takes place again, reset interlock function is executed, and only then is ON state restored at output.
- Setting: Default 0 indicates that interlock function is turned off; 1 indicates that interlock function is turned on.

Executed action	ASCII	RTU
Turn on interlock function	:01060086000172	01 06 00 86 00 01 A9 E3

Executed action	ASCII	RTU
Interlock function is turned on again when full non-shading occurs.	:01060087000171	01 06 00 87 00 01 F8 23

◎ Example 5. Output setting:

- Note: Does not change immediately after setting; only takes effect after it is powered on again. Before power on again, disconnect product output contact from the host and confirm that output action is normal; output can then be connected to the host, in order to prevent output malfunction and damage.
- Description: For normal operation states, refer to table below. Any abnormal diagnosis output will fix shading OFF state.

ON/OFF; measurement mode	External resistance 4.7Kohm	Full non-shading ON	Shading OFF
NPN	Pull up	Low	High
PNP	Pull down	High	Low
Push-Pull	Not connected	High	Low

- Setting: Default 0 represents NPN, 1 represents PNP, 2 represents Push-Pull

Executed action	ASCII	RTU
Set to PNP	:0106008900016F	01 06 00 89 00 01 99 E0

◎ **Example 6. Operation mode:**

- **Note:** Before mode switching, disconnect product output contact from the host, in order to prevent output malfunction and damage.
 - ◆ After switching from 0 or 1 to other modes, will enter stop mode, and must be powered on again to complete switching.
 - ◆ After switching from 2,3,4 to 1, will enter the stop mode, and must be powered on again to complete switching.
 - ◆ 2,3,4 can be directly switched without necessity of being powered on again.

➤ **Example**

Executed action	ASCII	RTU
Switch to measurement mode	:0106008A00026D	01 06 00 8A 00 02 29 E1


◎ Example 7. Beam detection result:

- Description: The TX/RX beam detection result can be read in measurement/FB/voltage mode.
- Reading: 1 represents diagnosis PASS or measurement mode RX beam non-shading;
0 represents diagnosis FAIL or measurement mode RX beam shading.
- Example Reading RX beam non-shading/shading state in measurement mode. Assume beams 7 - 22 are shaded by objects.

Executed action	ASCII	RTU
Reading RX beam state	:010300500004A8	01 03 00 50 00 04 44 18
Response	:010308023F020002C0021FCE	01 03 08 02 3F 02 00 02 C0 02 1F 9B C3

Numerical value response is as shown below: Where high byte 02H represents measurement mode, low byte represents beam state

Channel	32—25	24—17	16—9	8—1
Register address(Hex)	0053	0052	0051	0050
Data(Hex)	021F	02C0	0200	023F
Beam state(bit)	00011111	11000000	00000000	00011111

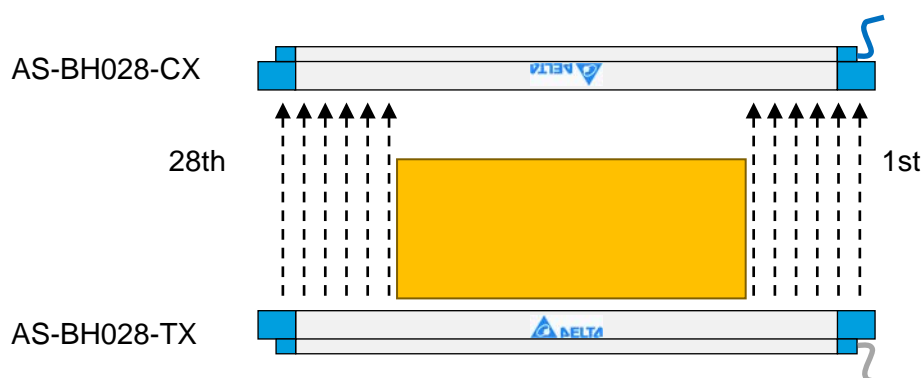


- Note: The transmitter/receiver module beam close to the outlet end is the first beam; except for models with total beam number 128, if model's total number of beams is N, normal reading of beam N+1 should be 1. For beams beyond N+1, normal reading should be 0. In the example above, beam 29 is 1, indicating it is correct that no beam is detected.

◎ Example 8. Active upload:

- Application: Suited for the logistics industry to measure the information about the exterior of a passing object. The overall area and placement of an object can be calculated based on the fixed scan cycle and scan result of each cycle. The overall volume can be calculated from the two groups of products. It can also be used for correction applications in the printing and textile industries.

- Description of automatic upload operation procedure:

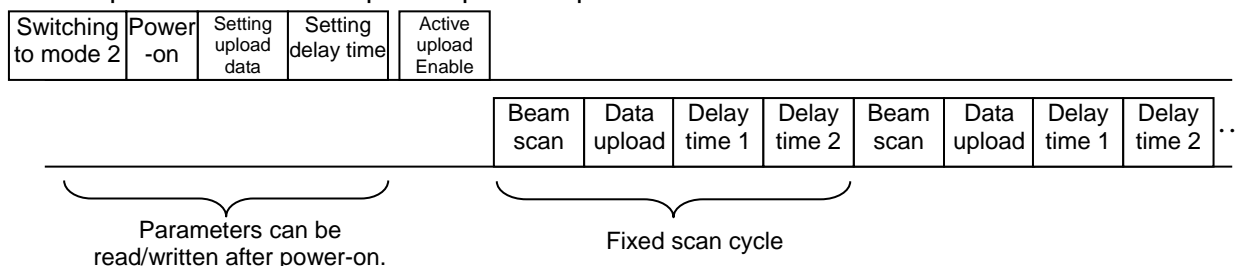

1. After product is set in measurement mode, power is turned off and then turned on again. After success, it will flash once every 2 seconds. (Product only needs to be set once.)

Executed action	ASCII	RTU
Switch to measurement mode	:0106008A00026D	01 06 00 8A 00 02 29 E1

2. Setting upload data content

Executed action	ASCII	RTU
Non-shading/shading state of each beam	:0106008C00006D	01 06 00 8C 00 00 48 21

3. Set scan cycle to scan time (Note 1) + data upload time (Note 2) + delay time setting (default value is 0).

Executed action (ex)	ASCII	RTU
Delay time 1 (0.1msec) = 32	:0106008D00204C	01 06 00 8D 00 20 18 39
Delay time 2 (1msec) = 10	:0106008E000A61	01 06 00 8E 00 0A 69 E6

4. Active upload function

Executed action	ASCII	RTU
Active upload function	:0106008B00016D	01 06 00 8B 00 01 38 20

- Description of setting automatic scan cycle:

Scan cycle = beam scan time + data upload time + delay time 1 + delay time 2.

- For beam scan time, refer to Table 4-1.
- Data upload time depends on total bytes of uploaded data and communication format. Refer to Table 4-2 and Table 4-3.
- Delay time 1: Unit is 0.1msec multiplied by set value.
- Delay time 2: Unit is 1msec multiplied by set value.

Example : The product to be used is AS-BH028-C with communication format of 38,400bps, RTU is 8, N, 1, and data is selected to be every beam's shading state, in order to obtain a fixed scan of 100Hz.

- 1) Beam scan time Equals 4.5msec, according to Table 4-1.
- 2) Data upload time: Total uploaded Bytes (Table 4-2) multiplied by upload time of every byte (Table 4-3).
Equals $9 \times 260.4\mu\text{sec}$, or around 2.3msec.
- 3) Delay time: 100Hz equals 10msec, minus 4.5msec, minus 2.3msec, and still requires delay of 3.2msec.

Delay time 1 can be set at 32, and delay time 2 is 0.

Alternately, delay time 1 can be set at 12, and delay time 2 at 2.

➤ Description of automatic upload data content

1. The uploaded data is set to be (008CH) = 0, indicating the non-shading/shading state of every beam; length will depend on the number of beams. The state of every beam is expressed by 1 bit. 1 represents shading/0 represents non-shading. Take RTU as an example:

Data ID	1	2	3	4	5	...	N + 3	N + 4	N + 5
Item	Device address	Function code	Returned data and byte count N	Beams 1-8	Beams 9-16	...	-8xN beam	CRC low byte	CRC high byte
	0x01	0x03	0x04	Data 1	Data 2		Data N	0xFA	0x33

	Returned data and byte count							
Bit	7	6	5	4	3	2	1	0
	Returned data(008CH) = 0				Byte count = N			

	Data 1-N							
Bit	7	6	5	4	3	2	1	0
Corresponding beam	Low beam				→	High beam		
Full non-shading state	0	0	0	0	0	0	0	0
Full shading state	1	1	1	1	1	1	1	1


2. The uploaded data is set at (008CH) = 1, indicating that the content is composed of the following 4 pieces of data: First shading beam; final shading beam; total shading number; and total shading length (cm). Take RTU as an example:

Data ID	1	2	3	4	5	6	7	8	9
Item	Device address	Function code	Returned data and byte count	First shading beam	Final shading beam	Total shading number	Total shading length (cm)	CRC low byte	CRC high byte
	0x01	0x03	0x14	0x00	0x00	0x00	0x00	0xFA	0x33

	Returned data and byte count							
Bit	7	6	5	4	3	2	1	0
	Returned data(008CH) = 1				Byte count = 4			

Example: The product being used is AS-BH028-C with pitch 20mm, and two objects shaded in the middle. The returned data is as shown below:


Channel	1 — 8	9 — 16	17 — 24	25 — 32
008CH = 0	Data 1	Data 2	Data 3	Data 4
Data(Hex)	03	F0	3C	00
Beam state(bit)	000000111111000000111110000000000000			

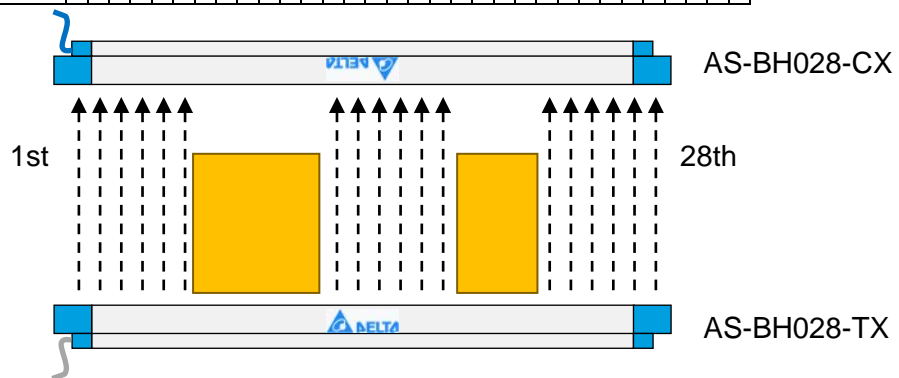

	Data 1	Data 2	Data 3	Data 4
008CH = 1	First shading beam = 7	Final shading beam = 22	Total shading beams = 10	Total shading length (cm) = 20
Data (Hex)	07	16	0A	14

© **Example 9. Description of hole detection example:**

Up and Low installation of two sets of AS-BH080-C, requiring staggered installation of transmitter and receiver.

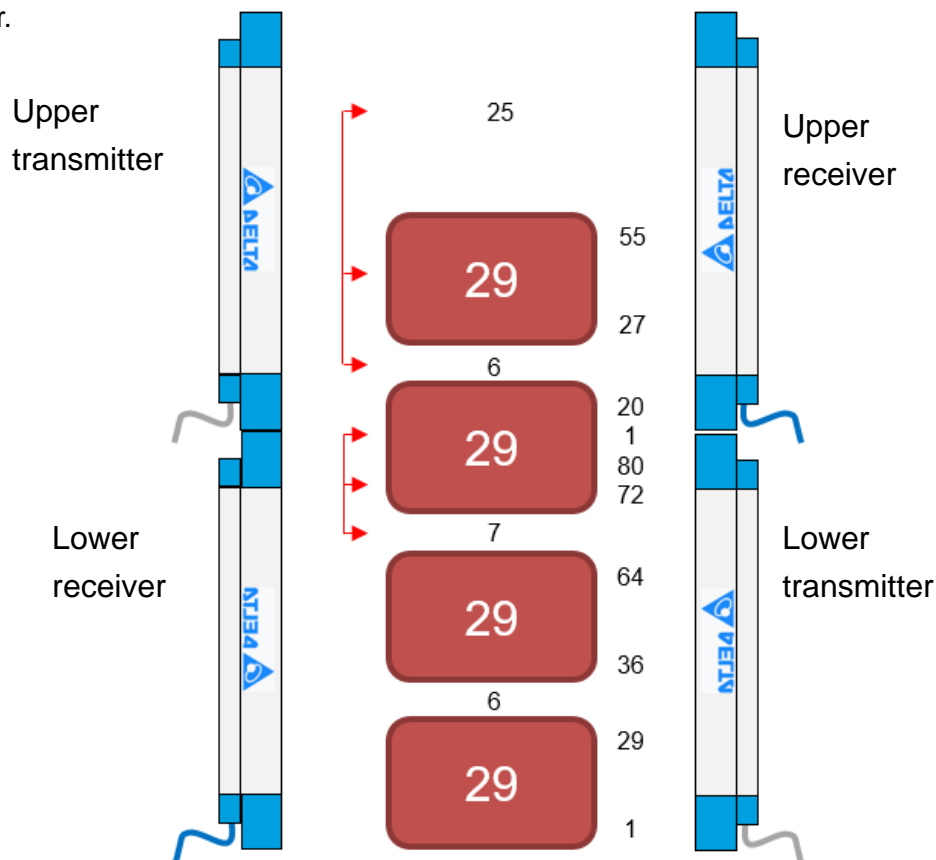

Register address	Description	Lower grating	Upper grating
00A0H	First shading beam	1	1
00A1H	Final shading beam	80	55
00A2H	The number from the first shading beam to the final one.	80	55
00A3H	Total length from the first shading beam to the final one.	160	110
00A4H	The last hole	0	25
00A5H	The last shading	8	29
00A6H	The second last hole	7	6
00A7H	The second last shading	29	20
00A8H	The third last hole	6	0
00A9H	The third last shading	29	0
00AAH	The fourth last hole	0	0
00ABH	The fourth last shading	0	0
00ACH	The fifth last hole	0	0
00ADH	The fifth last shading	0	0
00AEH	The sixth last hole	0	0

Table 4-1 Scan time

Unit: ms

AS-BF series	Time	AS-BH series	Time	AS-BA series	Time
		AS-BH008-C	2.2	AS-BA004-C	1.8
AS-BF024-C	4.1	AS-BH012-C	2.7	AS-BA006-C	2.0
AS-BF032-C	5.0	AS-BH016-C	3.2	AS-BA008-C	2.2
AS-BF040-C	5.9	AS-BH020-C	3.6	AS-BA010-C	2.5
AS-BF048-C	6.8	AS-BH024-C	4.1	AS-BA012-C	2.7
AS-BF056-C	7.6	AS-BH028-C	4.5	AS-BA014-C	2.9
AS-BF064-C	8.7	AS-BH032-C	5.0	AS-BA016-C	3.2
AS-BF072-C	9.6	AS-BH036-C	5.5	AS-BA018-C	3.4
AS-BF080-C	10.5	AS-BH040-C	5.9	AS-BA020-C	3.6
AS-BF088-C	11.4	AS-BH044-C	6.4	AS-BA022-C	3.8
AS-BF096-C	12.2	AS-BH048-C	6.8	AS-BA024-C	4.1
AS-BF104-C	13.1	AS-BH052-C	7.3	AS-BA026-C	4.3
AS-BF112-C	13.9	AS-BH056-C	7.6	AS-BA028-C	4.5
AS-BF120-C	14.9	AS-BH060-C	8.2	AS-BA030-C	4.8
AS-BF128-C	15.9	AS-BH064-C	8.7	AS-BA032-C	5.0
		AS-BH068-C	9.1	AS-BA034-C	5.2
		AS-BH072-C	9.6	AS-BA036-C	5.5
		AS-BH076-C	10.1		
		AS-BH080-C	10.5		
		AS-BH084-C	10.9		
		AS-BH088-C	11.4		
		AS-BH092-C	11.8		
		AS-BH096-C	12.2		

Table 4-2 Total Byte count of uploaded data (model vs. communication format)

Data amount	RTU		ASCII		Data amount	RTU		ASCII		Data amount	RTU		ASCII			
008CH	0	1	0	1	008CH	0	1	0	1	008CH	0	1	0	1		
					AS-BH008-C	6	9	13	19	AS-BA004-C	6	9	13	19		
AS-BF024-C	8	9	17	19	AS-BH012-C	7		15		AS-BA006-C	6		13			
AS-BF032-C	9		19		AS-BH016-C	7		15		AS-BA008-C	6		13			
AS-BF040-C	10		21		AS-BH020-C	8		17		AS-BA010-C	7		15			
AS-BF048-C	11		23		AS-BH024-C	8		17		AS-BA012-C	7		15			
AS-BF056-C	12		25		AS-BH028-C	9		19		AS-BA014-C	7		15			
AS-BF064-C	13		27		AS-BH032-C	9		19		AS-BA016-C	7		15			
AS-BF072-C	14		29		AS-BH036-C	10		21		AS-BA018-C	8		17			
AS-BF080-C	15		31		AS-BH040-C	10		21		AS-BA020-C	8		17			
AS-BF088-C	16		33		AS-BH044-C	11		23		AS-BA022-C	8		17			
AS-BF096-C	17		35		AS-BH048-C	11		23		AS-BA024-C	8		17			
AS-BF104-C	18		37		AS-BH052-C	12		25		AS-BA026-C	9		19			
AS-BF112-C	19		39		AS-BH056-C	12		25		AS-BA028-C	9		19			
AS-BF120-C	20		41		AS-BH060-C	13		27		AS-BA030-C	9		19			
AS-BF128-C	21		43		AS-BH064-C	13		27		AS-BA032-C	9		19			
					AS-BH068-C	14		29		AS-BA034-C	10		21			
					AS-BH072-C	14		29		AS-BA036-C	10		21			
					AS-BH076-C	15		31								
					AS-BH080-C	15		31								
					AS-BH084-C	16		33								
					AS-BH088-C	16		33								
					AS-BH092-C	17		35								
					AS-BH096-C	17		35								

Table 4-3: Transmission time per byte (communication format vs. baudrate)

Unit: us

			Baudrate (0082H)				
			5	4	3	2	1
Communication format		(0083H)	57600	38400	19200	14400	9600
ASCII	8, N, 1	1	173.6	260.4	520.8	694.4	1041.7
	8, O, 1	2	191.0	286.5	572.9	763.9	1145.8
	8, E, 1	3	191.0	286.5	572.9	763.9	1145.8
	8, N, 2	4	191.0	286.5	572.9	763.9	1145.8
	8, O, 2	5	208.3	312.5	625.0	833.3	1250.0
	8, E, 2	6	208.3	312.5	625.0	833.3	1250.0
	7, O, 1	7	173.6	260.4	520.8	694.4	1041.7
	7, E, 1	8	173.6	260.4	520.8	694.4	1041.7
	7, O, 2	9	191.0	286.5	572.9	763.9	1145.8
	7, E, 2	10	191.0	286.5	572.9	763.9	1145.8
RTU	8, N, 1	11	173.6	260.4	520.8	694.4	1041.7
	8, O, 1	12	191.0	286.5	572.9	763.9	1145.8
	8, E, 1	13	191.0	286.5	572.9	763.9	1145.8
	8, N, 2	14	191.0	286.5	572.9	763.9	1145.8
	8, O, 2	15	208.3	312.5	625.0	833.3	1250.0
	8, E, 2	16	208.3	312.5	625.0	833.3	1250.0

Chapter 5

Troubleshooting

Indicator	Cause	Inspection method
Light is off	Poor power contact	✓ Check the power connection and whether or not the connector pin is bent
Irregular flashing of red/green light	Poor beam alignment	✓ Whether it be switched to green light with near-distance alignment ✓ Check the module and bracket installed flat ✓ Check whether mounting method is susceptible to vibration
	Electrical interference	✓ Check if the shield is connected to a clean ground. ✓ Has external high power machine shutdown been improved?
	Light source interference	✓ Is there any external glare affecting device? ✓ Installation of multiple light curtains should use transmitter/receiver staggered format
Blue/green/red lights are lit simultaneously	Over-current	✓ Check load at output end ✓ Check output mode setting
Only blue light is lit, and green light is not lit; red light is lit when shielded	Power saving setting	✓ Turn off power saving setting
Orange light	Wiring error, or input voltage exceeds specifications	✓ Check if wire connection is normal ✓ Check if input voltage is within range
	Abnormal internal signal/voltage	✓ Contact DELTA service center
Red/green lights are lit, and blue lit is not lit	Abnormal number of beams	✓ Beam number setting error, or abnormal number of internal beams Contact DELTA service center

Contact Information

DELTA ELECTRONICS CO., LTD.**Electromechanical Business Group**

33068 No. 18, Xinlong Road, Taoyuan District, Taoyuan City, Taiwan

Telephone: 886-3-362-6301 /

Fax: 886-3-371-6301

Delta Greentech (China) Co., Ltd.<http://www.deltagreentech.com.cn>

Postal Code: 201209

No. 238 Minxia Road, Pudong New District, Shanghai

Telephone: (021) 5863-5678

Fax: (021) 5863-0003

Shanghai Telephone: 021-6301-2827 Fax: 021-6301-2307	Nanchang Telephone: 0791-6255-010 Fax: 0791-6255-102	Hefei Telephone: 0551-2816-777 Fax: 0551-2816-555	Nanjing Telephone: 025-8334-6585 Fax: 025-8334-6554
Hangzhou Telephone: 0571-8882-0610 Fax: 0571-8882-0603	Wuhan Telephone: 027-8544-8265 Fax: 027-8544-9500	Changsha Telephone: 0731-8827-7881 Fax: 0731-8827-7882	Nanning Telephone: 0771-5879-599 Fax: 0771-2621-502
Xiamen Telephone: 0592-5313-601 Fax: 0592-5313-628	Guangzhou Telephone: 020-3879-2175 Fax: 020-3879-2178	Jinan Telephone: 0531-8690-7277 Fax: 0531-8690-7099	Zhengzhou Telephone: 0371-6384-2772 Fax: 0371-6384-2656
Beijing Telephone: 010-8225-3225 Fax: 010-8225-2308	Tianjin Telephone: 022-2301-5082 Fax: 022-2335-5006	Taiyuan Telephone: 0351-4039-475 Fax: 0351-4039-047	Urumqi Telephone: 0991-6118-160 Fax: 0991-6118-289
Xi'an Telephone: 029-8836-0640 Fax: 029-8836-8000	Chengdu Telephone: 028-8434-2075 Fax: 028-8434-2073	Chongqing Telephone: 023-8806-0306 Fax: 023-8806-0776	Harbin Telephone: 0451-5366-0643 Fax: 0451-5366-0248
Shenyang Telephone: 024-2334-1612 Fax: 024-2335-1163	Changchun Telephone: 0431-8892-5060 Fax: 0431-8892-5065		

Chapter 6

Safety Precautions

Warning

⚡ This product is only suited the applications without any safety requirements and without special safety requirement range, under IEC 61508-5

⚡ Do not connect AC power to any contact of the sensor, because AC power will cause severe damage to the sensor. Check all wiring before powering on the machine to ensure all wiring is properly done.

Caution

- Keep high-current wires and motor connecting wires away from the sensor, to prevent noise from interfering with sensor operation.
 - Do not disassemble the sensor by yourself.
-
- ◎ Before using this area sensor product, machine to be used must be evaluated. Safety light curtain must be used for the following machinery equipment specified by the competent authority.
 1. Power punching/shearing machine.
 2. Hand-feed planer.
 3. Circular saw for woodworking.
 4. Power stacker.
 5. Grinder.
 6. Grinding wheel.
 7. Explosion-proof electrical equipment.
 8. Photoelectric safety device for power punching/shearing machine.
 9. Blade contact prevention device for hand-feed planer.
 10. Repulsion prevention device and saw teeth contact prevention device for circular saw for woodworking.
 11. Other equipment specified and announced by central competent authorities.
 - ◎ For those not listed among aforementioned machinery equipment specified by the competent authorities, risk assessment must be implemented according to rule GB/T 20438 (IEC 61508).

This product can only be used by those without any safety requirements and without any special safety requirements.

Chapter 7

Warranty

All DELTA products have been checked in detail before shipment. If there is any malfunction, contact one of our branches or distributors and describe the malfunction situation in detail.

◎ **Warranty period**

- The warranty period is 2 years starting from product delivery to the buyer.

◎ **Warranty coverage**

- If a malfunction takes place within the aforementioned warranty period and can be attributed to DELTA itself, our company will offer a new product for free replacement. However, the following conditions are not covered by this warranty:
 - 1) Any malfunction caused by improper conditions, environment, operation, or failure to follow the operation methods introduced in the operation manual, user manual, and all product instructions.
 - 2) Any malfunction not caused by product defect, such as equipment and software used by the customer.
 - 3) Malfunction caused by renovation or repair of the product not conducted by DELTA specialist.
 - 4) Damage caused by maintenance or replacement of consumable parts not in accordance with the correct methods listed in the operation manual and user manual.
 - 5) Malfunction due to any natural disaster, such as fire, earthquake, flood, or any other external factor (such as abnormal voltage, for which DELTA shall not bear the responsibility).
- The product warranty coverage is limited only to the aforementioned content. It is not responsible for any other secondary loss of property (such as equipment damage or business opportunity) or any other damage caused by product malfunction.